

QUICK START GUIDE ZECHO RANGE EXTENDER

into Power Jack and

power outlet

PACKAGE CONTENTS

- 1: PDQ Smart Range Extender
- 2: BLE Antenna
- 3: Power Supply 5V@1A
- 4: Quick Start Guide

PREREQUISITES

- 1: Active PDQ Smart Server Account https://portal.pdqlocks.com
- 2: Install PDQ Smart App on Smartphone
- 3: Add at least 1 PDQ Smart Lock to account

Paste your Product Label here


PRODUCT LABEL




QR CODE

LED INDICATIONS:

EVENT	RED	WHITE	BLUE
Power On	Blink for 3 times	Blink for 3 times	Blink for 3 times
Factory Reset	Blink for 3 times	Blink for 3 times	Blink for 3 times
Bluetooth Connection	_	_	Blinking
Not Connected in network	_	_	Solid
Connected in network	OFF	OFF	OFF
Network request is in process	_	Blinking	_
Network request execute successfully	-	Solid for 3 Sec	-
Network request fail	Blink for 3 sec	_	_
Not Getting Network ID from Smart phone	Solid	-	-

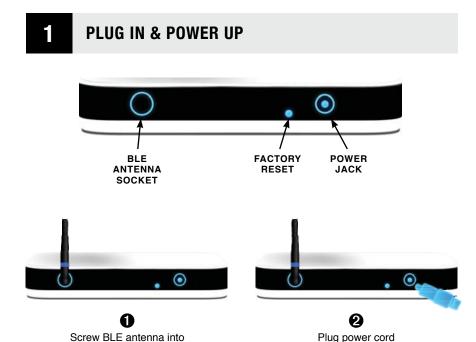

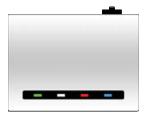

BLE Antenna Socket.
Align to upright position

Verify the Green LED is ON, see the LED chart on this page for if any other light blinks or remains solid.

8

PN 88316 REV 1 PAGE 1 OF 2



QUICK START GUIDE **ZECHO RANGE EXTENDER**

Powered by



REGISTER PDQ SMART RANGE EXTENDER TO PDQ SERVER









Launch PDQ Smart App on Smartphone. Tap Device

2

Tap drop down menu. Tap Add **SR Device**

8

Tap SCAN **QR CODE** and scan code.

*QR code is located on back of SR Ethernet bridge and front of this guide

Enter user-friendly device location. Tap Choose

4

device name and **Existing Account.**







0 Tap Register SR Device



Note: If Range Extender is not able to connect with PDQ SMART Network then please restart it and wait for 1 minute



Once registration is complete, the Range Extender home screen will appear and your devices are ready to use.



For product support go to: https://www.pdglocks.com/about-pdg-smart/ Contact us at support@pdqlocks.com or Customer Service at 800.441.9692

Headquarters: 2754 Creek Hill Road • Leola, PA 17540 • 800.441.9692 • 717.656.6892 Fax Regional Distribution Centers: Kansas City, MO, Salt Lake City, UT, Seattle, WA

PN 88316 REV 1 PAGE 2 OF 2